


JM PHOTOVOLTAIC SBS ASSEMBLY PLATES

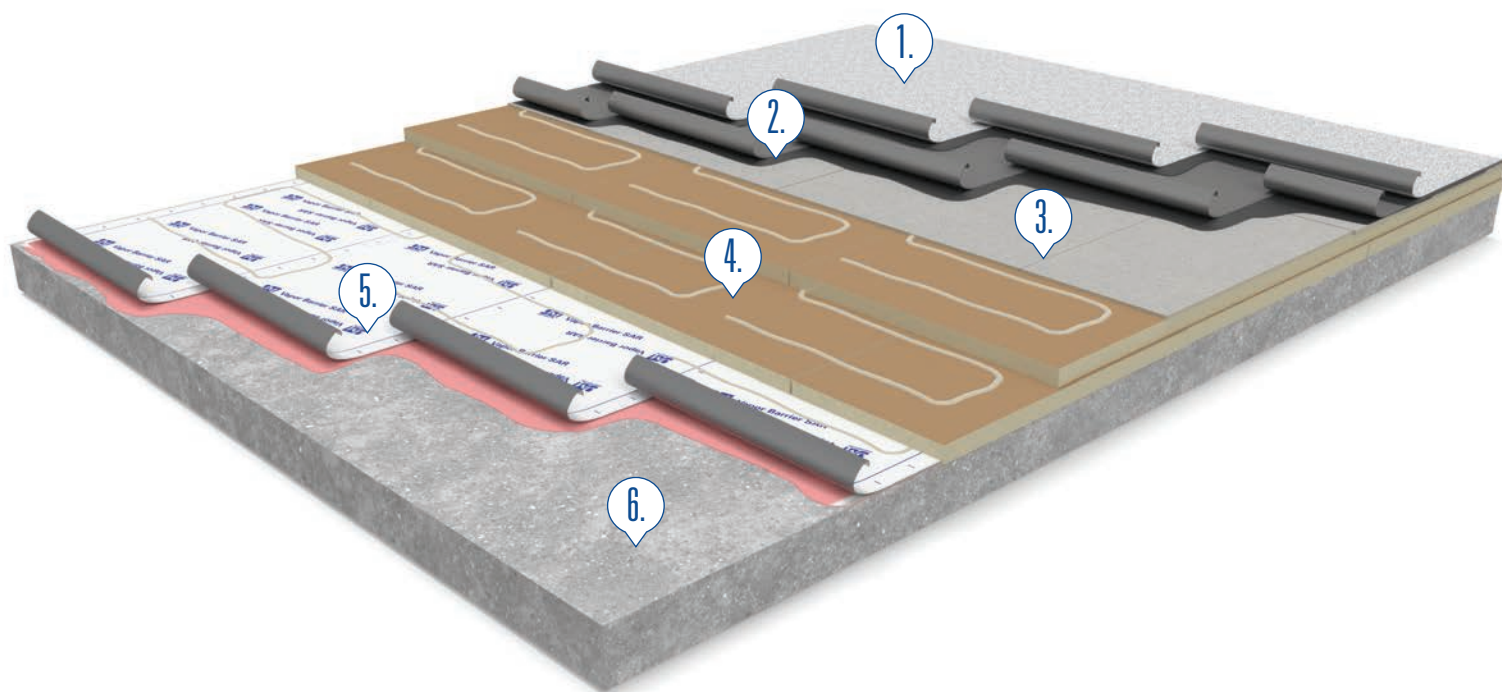

1. JM DynaLastic® 180 FR CR G in MBR Cold Application Adhesive (minimum of 30 day cure time before applying PV).
2. JM DynaBase® in MBR Cold Application Adhesive.
3. ½" DuraBoard® or Protector® HD Cover Board 4' x 4' in JM Two-Part Urethane Insulation Adhesive.
4. Layer of ENRGY 3® Insulation in JM Two-Part Urethane Insulation Adhesive. Adhesive beads are typically 12" on center.
5. Vapor Barrier SAR adhered to a concrete deck primed with SA Primer or SA Primer LVOC or a ribbon adhered polyester-reinforced SBS base sheet in DynaSet 1K (not shown).
6. Concrete Deck.

Learn more about our comprehensive portfolio of products and systems at jm.com/roofing